

USB Setting Mode


Unlike USB Password Mode, USB Setting Mode needs to use the PC software "Bodycam.exe".

1) Set "USB Setting Mode".




2) Turn off camera.


3) Connect camera to PC via USB cable, and power on the camera, on screen, it displays "USB setting mode".

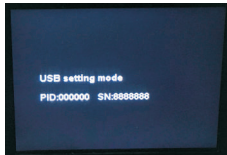


4) Open "Bodycam.exe".

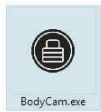

5) Software displays "Device connect". Enter password, and click Login. (Default Password: 000000)

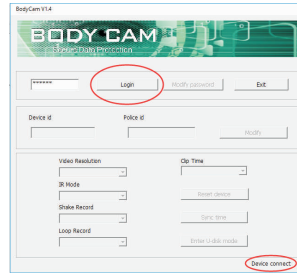

6) User can change password, set ID, enter into U disk mode, sync time and reset device.

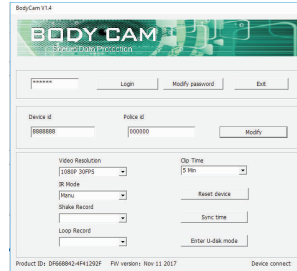

Note: "Enter U-disk mode" means to have removable disk of camera in My Computer or This PC.